SCENE — For Instant Access Operation

DVD
Viewing

Source: DVD
Surround: STRAIGHT

Disc
Listening

Source: DVD
Surround: STEREO/
7(5)ch STEREO

TV
Viewing

Source: DTV/CBL
Surround: STRAIGHT

Radio
Listening

Source: FM/AM (TUNER)
Surround: MUSIC ENHANCER/
7(5)ch STEREO

< With ordinary receivers >

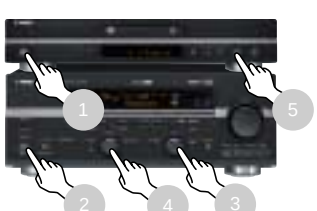

5 Steps...
Complicated!

1. Turn on DVD Player
2. Turn on AV Receiver
3. Set Input Selector
4. Set Surround Mode
5. Play DVD

< With SCENE >

Just 1 Step!
Much Easier!

1. Press
SCENE Button

*Controllable DVD Player:
Yamaha DVD-S2700BL, DVD-S1700BL, etc.
(via "Remote In" port)

• Only the RX-V861BL and RX-V661BL SCENE buttons can power on source units, and they can only power on Yamaha DVD and CD players. • The RX-V461BL and RX-V361BL SCENE buttons can not turn the receiver power on.

A New Level of Operating Ease Offered on the RX-V861BL, RX-V661BL, RX-V461BL and RX-V361BL.

When using a receiver, a number of operations are necessary in order to hear what you want to hear, and the way you want to hear it. Turning on the power, selecting the source, selecting the DSP mode, beginning play and adjusting the volume. These steps are troublesome, especially for people not familiar with the receiver's functions and buttons. It would be much easier if you could just press one button and hear what you want to hear.

With the these receivers, this is now possible. They offer four SCENE buttons; pressing a button automatically launches a number of operations that initiate play of the source controlled by that SCENE button. The four buttons are provided on the remote control as well.

Initially, the four SCENE buttons are set to default settings for DVD Viewing, Disc Listening, TV Viewing and Radio Listening. Pressing SCENE 4 (radio) for example, would initiate power on, tuner selection, Compressed Music Enhancer mode selection and 7.1- (5.1-) Channel Stereo mode selection.

These default settings can easily be changed to other settings, called Templates. From 13 to 18 different Templates can be chosen. Other Templates include iPod listening, TV sports viewing and action game playing.

In a four-person family, for example, each person can have their own SCENE button. User A may switch his button among DVD viewing choices and music disc listening choices. User B among music disc, radio and iPod. User C among TV and game playing. And user D may only use the TV viewing SCENE. Of course, any user can select any of the Templates at any time.

Operating a receiver has never been this simple, this quick and this convenient.

SCENE Templates

Model	RX-V861BL/RX-V661BL	RX-V461BL	RX-V361BL
DVD	DVD Viewing ①	DVD Viewing ①	DVD Viewing ①
	DVD Movie Viewing	DVD Movie Viewing	DVD Movie Viewing
	DVD Live Viewing	DVD Live Viewing	DVD Live Viewing
DVR	DVR Viewing	DVR Viewing	DVR Viewing
DVD-Audio/ Super Audio CD/CD	Disc Hifi Listening	Disc Hifi Listening	
	Music Disc Listening	Music Disc Listening	Music Disc Listening
	Disc Listening ②	Disc Listening ②	Disc Listening ②
CD	CD Hifi Listening	CD Hifi Listening	
	CD Listening	CD Listening	CD Listening
	CD Music Listening	CD Music Listening	CD Music Listening
TUNER/RADIO	Radio Listening ④	Radio Listening ④	Radio Listening ④
	XM Listening	XM Listening	XM Listening
iPod	iPod Listening	iPod Listening	
TV	TV Viewing ③	TV Viewing ③	TV Viewing ③
	TV Sports Viewing	TV Sports Viewing	TV Sports Viewing
GAME	Action Game Playing	Game Playing	Game Playing
	RPG Playing		
LP Record	LP Record Listening		
Template Total	18	16	13